Quick Assembly Connector (No Tool) – Flat Cable
User's Manual **Rev. 2011A**

A. Instruction for SC- Flat Cable

You may set Fiber Checker for the best result. If you don't have it, please skip Step 1 & Step 8.

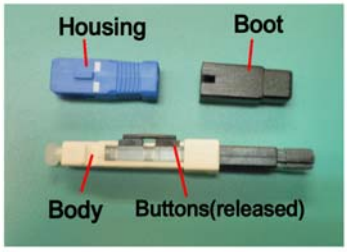	**< Drawing >** Major components. *Please confirm buttons are released before using. Refer to Page 2 for releasing.	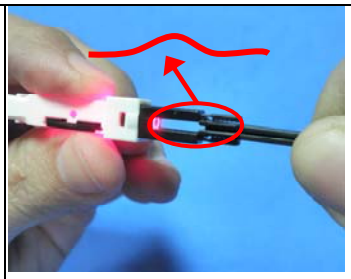	Step 5 Push the fiber to the end and form a very small curve in the jaw. (With Fiber checker, please fine tune fiber until red light is weak.)
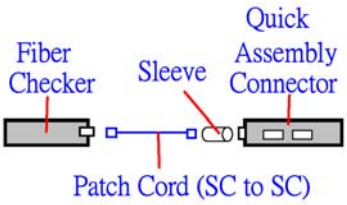	Step 1 Take off dust cap and clean the connector. Then, insert it to Fiber Checker (Patch Cord).* (Skip this if no Fiber Checker.)		Step 6 Press both buttons on the body during the fiber is curving. *Make sure to push buttons to the end.
	Step 2 Wear boot.	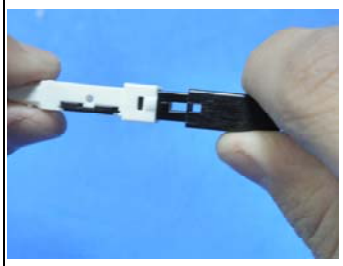	Step 7 Wear the boot.
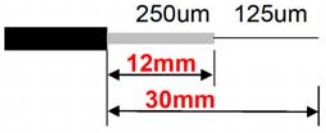	Step 3 After striping fiber, please cleave the fiber as the length.	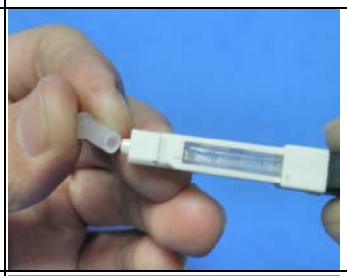	Step 8 Take off from Fiber Checker (Patch Cord) and wear the dust cap. (Skip this if no Fiber Checker.)
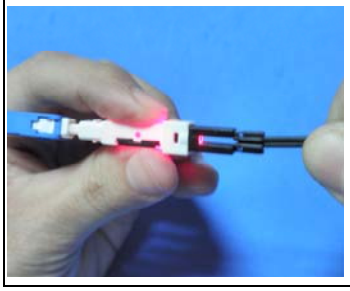	Step 4 Insert the tube and fiber to the body.	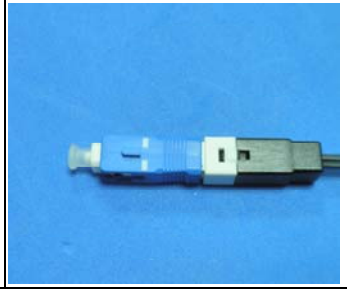	Step 9 Wear the housing. Now the job is done.

- Patch cord on Step 1 is for easy operation.

Quick Assembly Connector (No Tool) – Flat Cable
User's Manual **Rev. 2011A**

B. Release Methods

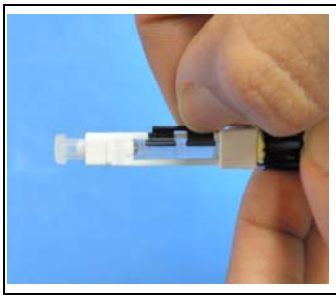	**< Method A >** Use nail to release the buttons.	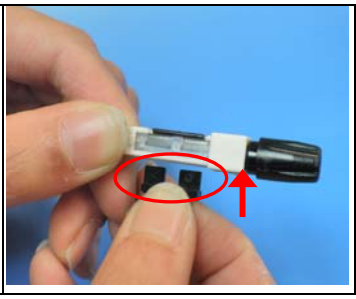	**< Method B >** Use "Release Key" to unlock the buttons. *The key is free to customers.

C. Contact Information

If you have any question for our products, please contact us. You can also find the "Training Video" on our web.

BroField Technology Inc.
NO, 6, LN 40, SEC 1. CHU-MEI RD, CHUTUNG,
HSINCHU, 310 TAIWAN
E-mail: info@brofield.com
Web: www.brofield.com

TEL +886-3-5833517
FAX +886-3-5827018